



# TKR5447B

## COMPLETE CENTER DIFFERENTIAL

### (OVERVIEW)

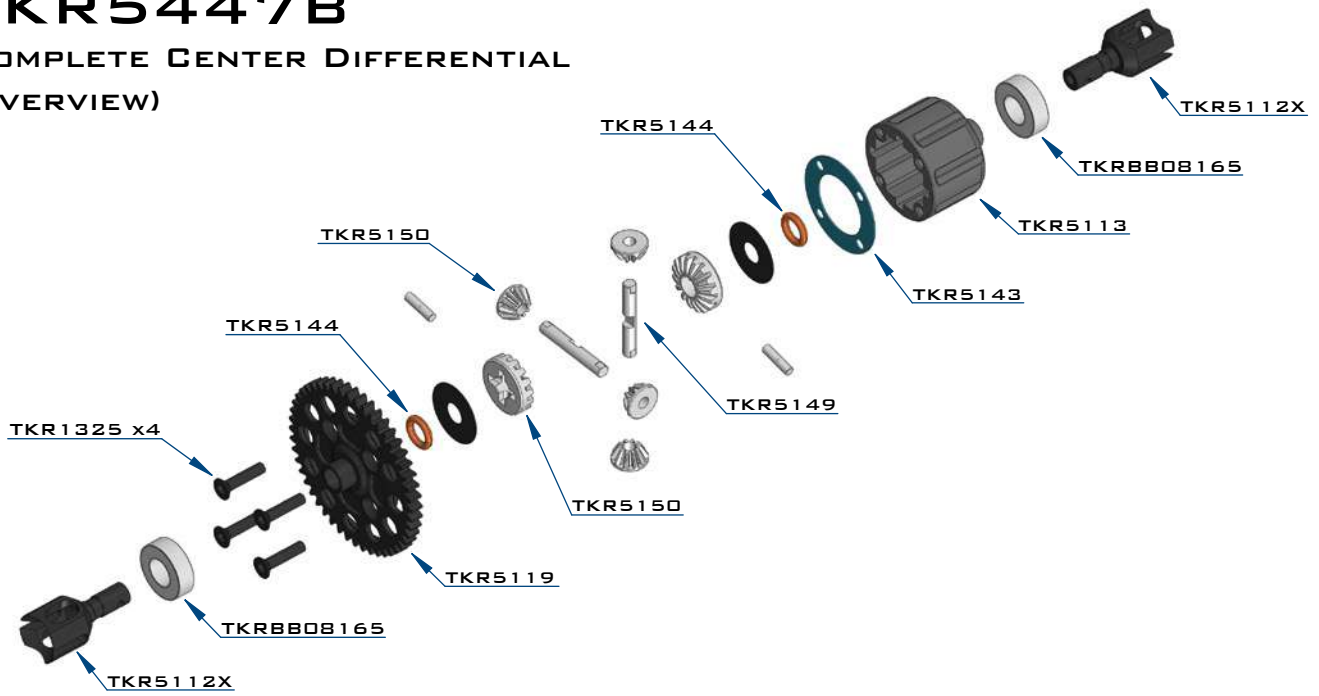


#### STEP 1

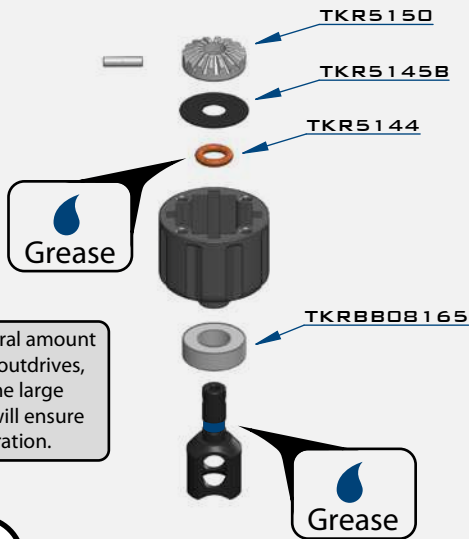


Note: Apply a liberal amount of grease to the outdrives, o-rings, and the large diff shims. This will ensure smooth operation.

#### STEP 2

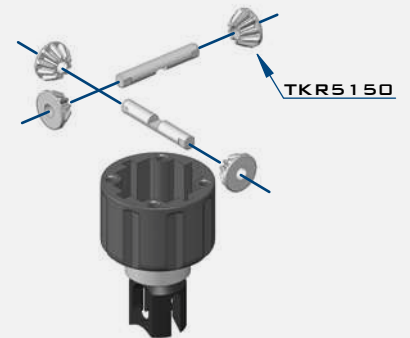

#### STEP 4


Note: Apply a liberal amount of grease in the areas between the shims and o-rings, as well as around the outdrive and both sides of the seal.

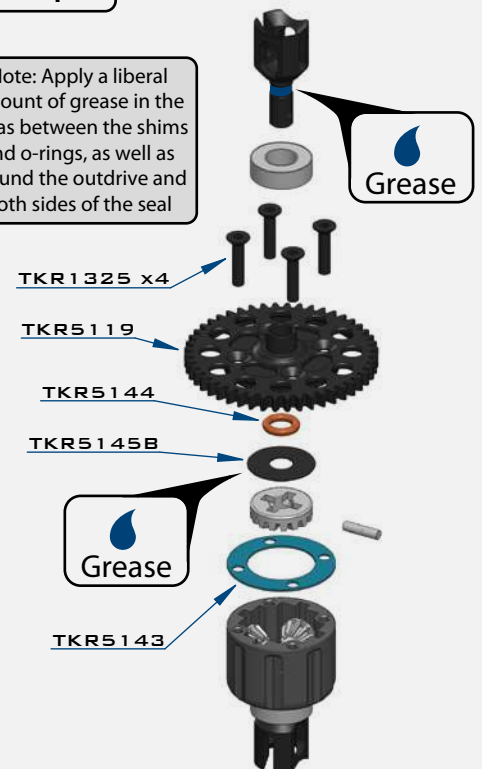


#### STEP 3




Fill oil to 1mm below full

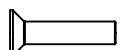 x4  
TKR1325  
M3X14MM FLAT HEAD SCREW

 x2  
TKR5144  
DIFFERENTIAL O-RINGS

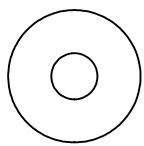 x2  
TKR5145B  
DIFFERENTIAL SHIMS (6X17MM)

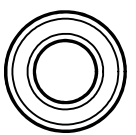 x2  
TKRBB08165  
BALL BEARING(8X16X5MM)